

# Interwrite Cricket<sup>RF</sup>

## User's Guide

### Turn On Cricket

- Ⓞ When your instructor has started the Response RF Class, press the Power button to turn your Cricket on.
- ⚡ The green Connect LED will blink fast, indicating your Cricket is ready to join the Class.

### Response Software Toolbar



### Press Two-Character Join Code

Connect to the Class by pressing the two-character Join Code displayed on the Response Toolbar.

- ✓ LED will be green if connected.
- ✗ LED will be red if your Cricket did not connect; try again.

### Connection Status

- ⚡ When you have connected to (joined) the Class, the Connect LED will blink slowly as long as you remain connected.

### Sending Answers

Press the numbered/lettered Response button that represents your answer.

### Transmission Status

- ✓ If your Response was received, the Received LED will be green.
- ✗ If your Response was not received, the Not Received LED will be red. Resend your answer.

### Turn Off Cricket

- Ⓞ Hold down the Power button for two seconds until the 🔌 LED goes off.

### Low Battery Warning

- 🔌 The green Battery LED will blink slowly when the battery is low and should be replaced.



[www.InterwriteLearning.com](http://www.InterwriteLearning.com)